



PRINCE CASTLE - HEAT DISCOLORATION REMOVAL

DO NOT USE ON HOT EQUIPMENT

TOOLS REQUIRED:

- Bar Keepers Friend Cleanser (Liquid Cooktop Cleaner)
- Soft cloth or non-scratch sponge
- Warm water
- Dry microfiber towel
- Gloves (recommended)



STEPS:

1. Power down & cool

- Turn off and unplug the toaster
- Make sure the infeed area is completely cool to the touch

2. Remove loose debris

- Wipe away crumbs, grease, and buildup with a dry or slightly damp cloth

3. Apply cleaner

- Lightly dampen the cloth with Bar Keepers Friend and wipe the front of the toaster.

4. Clean gently

- Rub **with the grain** of stainless steel
- Use light pressure—don't scrub aggressively

5. Short dwell time

- Let it sit **no more than 1 minute**
- Do NOT let it dry on the surface

6. Rinse thoroughly

- Wipe with a clean damp cloth to remove all residue

7. Dry immediately

- Use a microfiber towel to prevent streaks and spotting

TIPS:

- **Avoid contact with electrical openings or seams**
- **Do not use on hot surfaces** (can stain or discolor)
- Always follow the grain to maintain finish
- Test in a small area if the finish is cosmetic/high visibility
- Light cleaning: daily or as needed
- Deeper polish: weekly depending on grease exposure